

How to insert the Micro SD memory card

Interlocking cable for Left(right) turn signal and rear light

Right(Blue) Right turn indicator


Left(Yellow) Left turn indicator


Front or Rear Front, Rear light

(5) GND(Black) Grounding work

or Inner (Red)



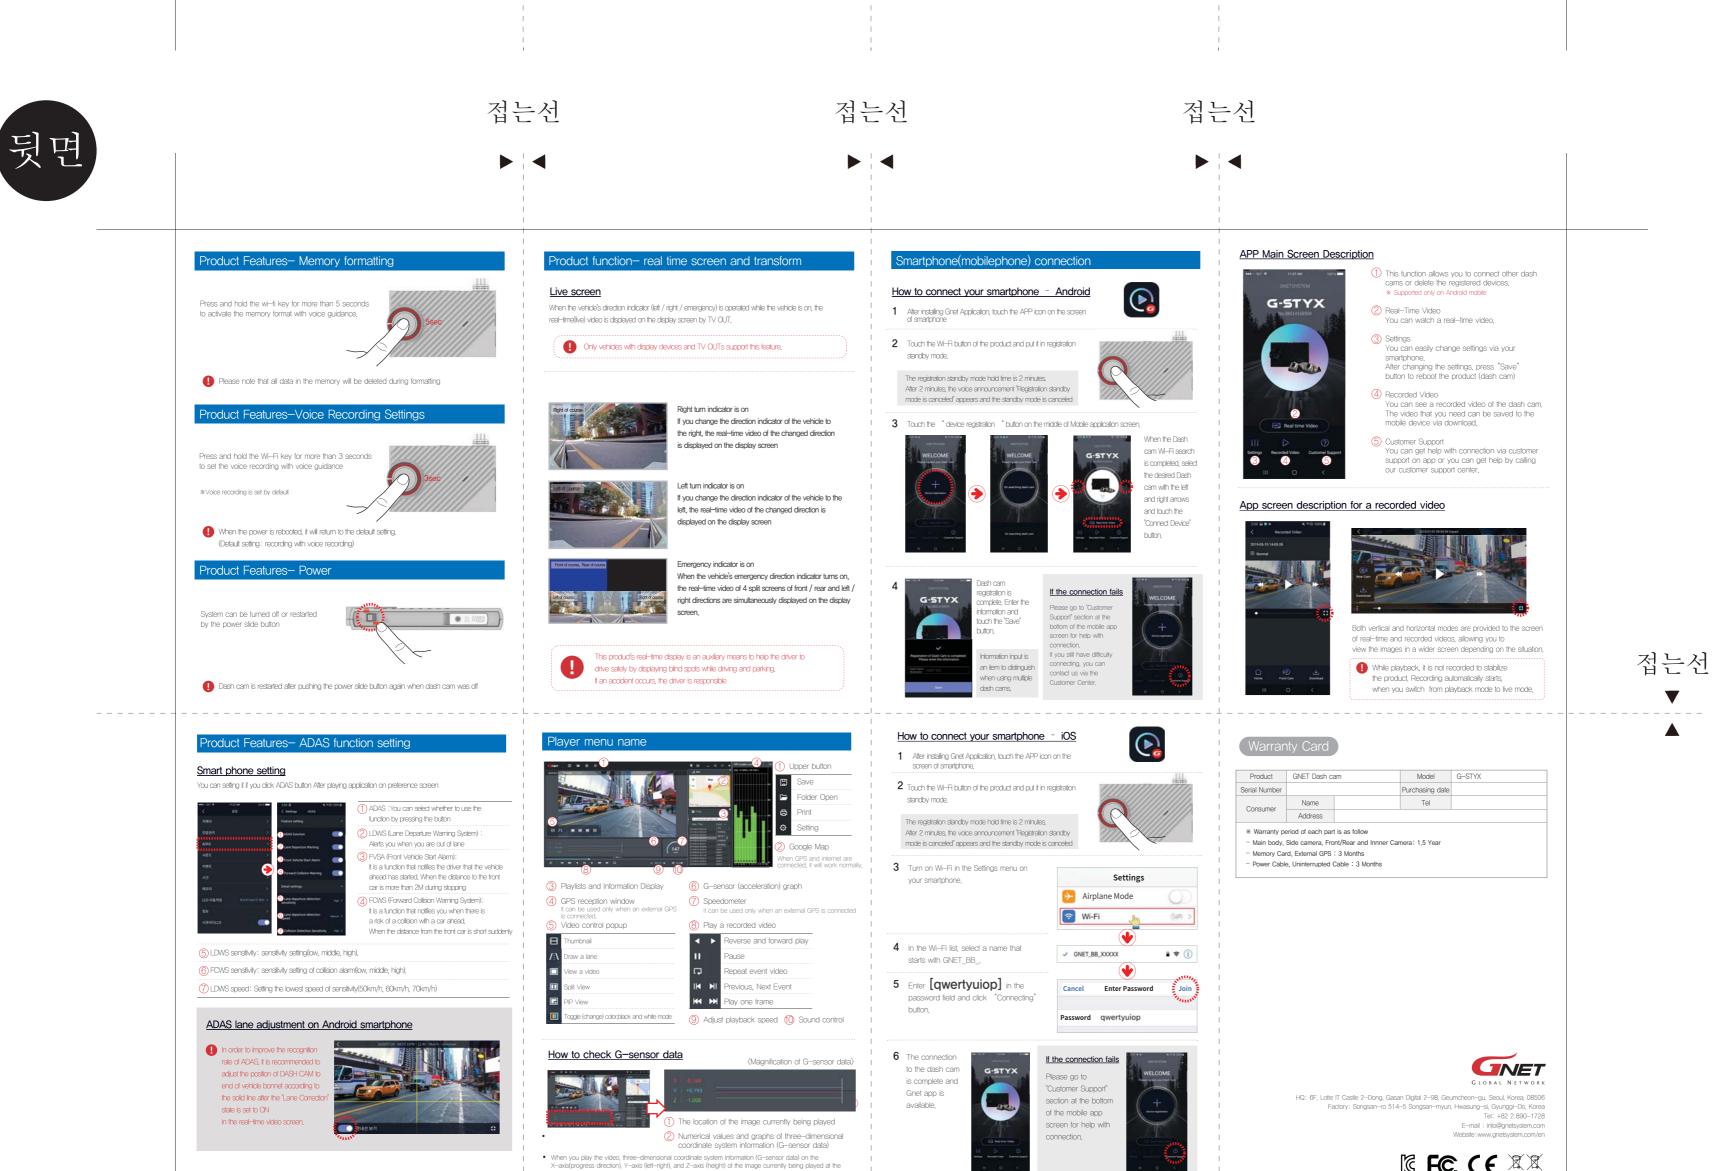

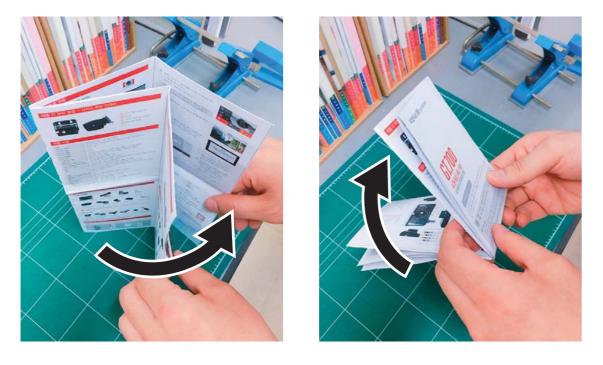

G-STYX_manual(E)_1page_rev01_191008 -양면인쇄(4도) / 아트지 80g *하단 접는 예시 참고

Check the operation of the internal camera periodically on the LCD real-time screen before

1 WI-FI connection button 6 OBD Port

(4) Cover of Micro SD card (9) Detect Port

GPS Port

8 AV OUT Port

2 REC LED

Over Key

5 DC-IN Port

(1) USB Port(Wi-Fi Dongle)

3 Side camera's lens

12 HDMI Port

Onnection cable(Side, Front, External storage)

driving. If the internal camera is defective, the screen is not switched to the internal image

Extending or cutting the side camera and rear camera cables may cause product quality

and only the front image is captured.

problems.

	G-sensor data location is output,		
		l l	
		I	